



To Start the Bobcat Turn the Key to the right (not shown) and then press the hydraulic operation button on the left panel



Pull down the seatbelt attachment located overhead in the cab

Throttle



Handles are used to move the bobcat

Pedals are used to operate the bucket

RENT IT SAFELY

Know the Worksite

- Understand and comply with applicable laws and regulations. Call local utilities before you dig. 1-888-258-0808.
- Know the location of underground gas, water and electrical lines.
 - Inspect the work area for holes, drop-offs or unstable ground.
 - Know the weight limitations of operating surfaces and clearances.

Changing and Using Attachments



For fast, secure attachment change, handle the attachment change handle. Pushes down easily, pressing wedge through frame and attachment hole for solid connection.

Make sure the attachment is securely fastened to the loader. Bob-Tach® system levers should be fully down and locked with the wedges extended through the attachment mounting holes. Use only approved attachments.




The attachment signs (decals) and Operator's Handbook provide operating and maintenance instructions. Failure to follow warnings and instructions can cause serious injury or death.

Getting On and Off Safely

Before leaving the operator's seat:

- Lower the lift arms and put the attachment flat on the ground.
- Stop the engine.
- Engage the parking brake.
- Raise the seat bar and move the controls until both lock.
- Remove the key to prevent unauthorized starting.

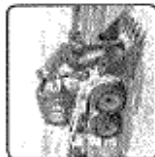

- Use the steps, grab-handles and skid-resistant surfaces when getting on or off the loader.
- Do not jump off the machine.

While Operating

Start the engine with the steering levers and hydraulic controls in NEUTRAL. Keep bystanders away.



- Move the steering lever controls smoothly. Hydraulic drive systems are responsive, and the loader will move immediately when the controls are activated. Do not pull back suddenly on the steering lever controls to stop the loader. Slow down when approaching the dump site.
- Load, unload and turn on flat level ground. Do not travel or turn with the lift arms up.
- Carry the load low.



Keep bystanders away from the loader and work area. Do not raise the lift arms and attachment over another worker.



- Never exceed the loader's rated operating capacity (ROC).
- Use the correct bucket size for the type and density of material being handled.



- Always look in the direction of travel.
- Never carry riders or use the loader as a manlift.



- Keep bystanders away from the work area.
- On slopes, keep the heavy end of the loader uphill.
- Travel directly up and down slopes, not across them.

Keep hands and feet inside the operator's area. Never lean out the front of the cab with the engine running.



- Never operate the loader's controls from the ground.
- Always sit in the operator's seat when activating the controls.
- Keep the bucket level when raising the lift arms to prevent material from falling out of the bucket.

PREPARE TO PERFORM

It's Basic

TRAIN NOW

The Bobcat® Backhoe Loader Operator Training Course and a brief safety video are available in English and Spanish at Bobcat.com/Training

