

025
0331
20
99

Instruction Sheet 79083A
Extension Installation Instructions
for
Attachments 13706A, 13708A, 13710A, 16528A, 16529A

⚠ WARNING: Serious injury could occur if the power supply cable is connected to a power source during installation of an extension. Always disconnect the power supply cable before installing an extension, replacing abrasive, or performing any maintenance.

⚠ WARNING: Serious injury could occur if the machine is operated partially assembled. Replace all guards and keep all fasteners tight. Keep hands, feet, and loose clothing away from all moving parts.

To install an extension follow this procedure:

1. Remove beltguard (figure 1-a) position extension over motor and start thumb screws (figure 1-b).

For 16529A: Position drive belt in set of grooves on the motor pulley as shown in figure 2-a.

For 16528A, 13706A, 13708A, and 13710A: Position drive belt in set of grooves on the motor pulley as shown in figure 2-b. **NOTE:** If your machine is a Super 5E or is not equipped with a four groove motor pulley, you must replace it with part number 66199A when installing extension 16529A.

2. Tension drive belt, then tighten thumb screws. Rotate pad driver to inspect position of drive belt in motor pulley and pad driver belt grooves.

⚠ CAUTION: Rapid belt wear will occur if both strands of the drive belt do not run in their respective grooves on the pad driver and motor pulley.

3. Install belt guard.

4. Remove screw and abrasive retainer. Center abrasive on pad and secure with abrasive retainer and screw. See figure 2-c.

(Parts List and Breakdown for Super E machines on back)

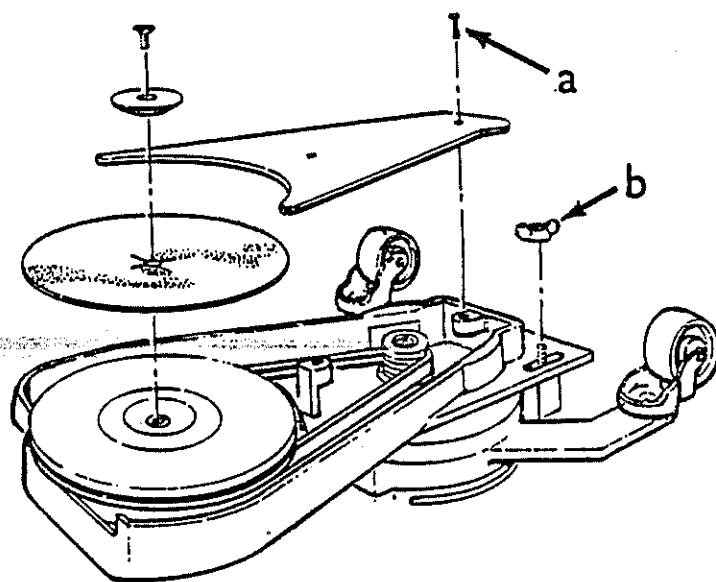


Figure 1

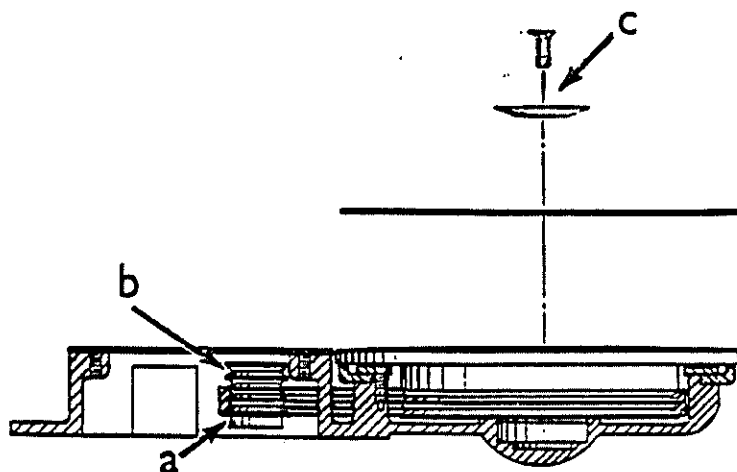


Figure 2