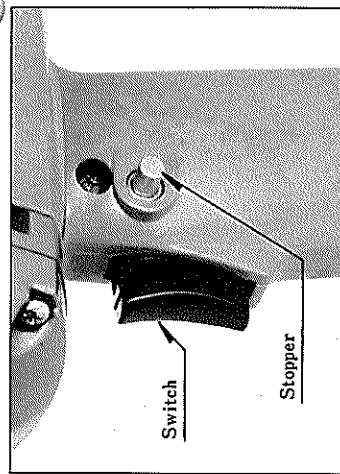 
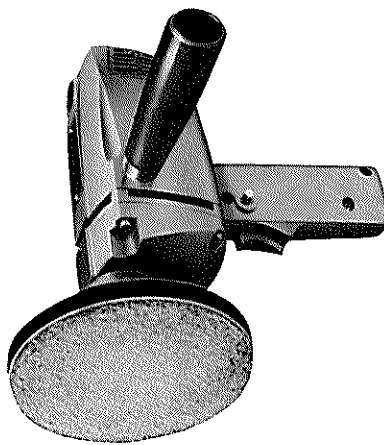 


POLISHER

MODEL (P-2000A
P-2000N

the pistol switch supplies and releasing finger from the cuts it off. By pushing the at the grip side when the switch is pushed, the switch ON even if finger is released e switch.

is after Use



the switch and handle cover to rt deposited inside the body. If ned, switch malfunction or may

nally remove motor cover to irt and dust deposited inside or. When cleaning, take care scratch the commutator, as as may cause overheating. Also to keep the commutator away l or water.

bon brush can be used as much thirds of its total length (7 m the front tip). Check for gularly by removing the brush. ssively worn carbon brush may scratches on the commutator, to overheating.

on brush can be easily replaced owing the holder cap with a iver.

Standard Accessories

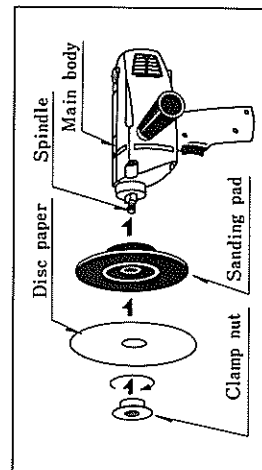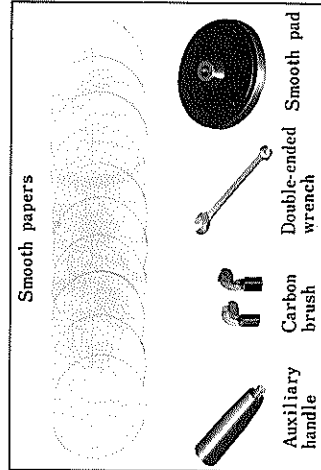Paint Removing (with optional acces-
sory)

Use a disc paper.

Effective grinding can be done when the disc paper is angled 10°~15° against the metal plate surface and a beautiful finishing can be also obtained in this manner.

Carbon brush

