


OPERATING INSTRUCTIONS


CRAIN JUNIOR MODEL "A" TILE CUTTER

Packed with the Cutter are two crankshaft adjustment screws and tile guide. (Part #1001-J and (Part #1001-C.) Fasten the screws into the threads in the right and left hand standards. Adjust the blade to shear cut from left to right. The tile guide is used to repeat cuts and can be set along the guide on the aluminum base casting.

SELF-MEASURING—The locating stops position the Cutter directly at the edge of the last full field tile. When the tile to be cut is placed in the Cutter, dimension "A" equals "B." Before cutting, the tile should be placed upside down.

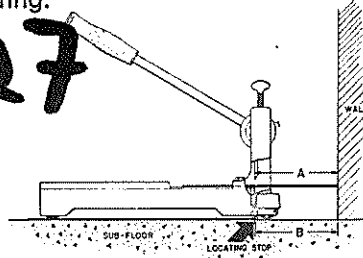

PARTS LIST

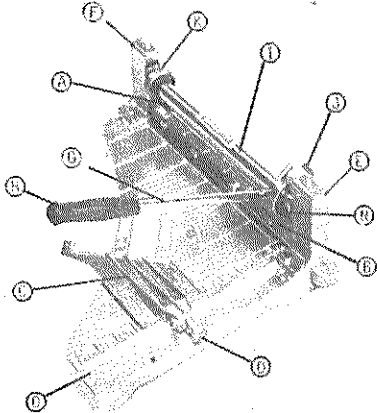

DESCRIPTION

Order #	Description
1001-A	Top Blade
1001-B	Bottom Blade
1001-C	Tile Guide w/Wing Screw
1001-D	Tile Guide Wing Screw
1001-E	Right Hand Standard
1001-F	Left Hand Standard
1001-G	Handle & Grip
1001-H	Handle Grip Only
1001-I	Crankshaft
1001-J	Crankshaft Adjusting Screw
1001-K	Crankshaft Ball Bearing
1001-L*	Inner Cam Bearing
1001-M*	Return Spring
1001-N	Blade Carrier
1001-O	Base
1001-P*	Ball Caster Set (3) & Applicator
1001-Q*	Ball Caster
1001-R*	Floor Guide
1001-S*	Blade Sharpening (Exchange)