

III. CONTROLS

- A) **The brush direction control lever:** This lever is located just to the left of the engine (looking away from operators position). When actuated, the lever can be set in any of three positions for sweeping left, right or straight ahead.
- B) **The throttle lever:** This lever is located on the handle bar next to the "Off-Fast" decal. When properly adjusted, this lever serves as automatic choke at full throttle, and remote shut-off when at closed throttle. Operator must test remote shut-off before depending on it.
- C) **The wheel engagement lever:** This lever is located next to the right side of the handle bar. The Sweeper will move forward when the operator pulls in on this lever.
- D) **The wheel and brush engagement lever:** This lever is located on the left side of the handle bar. It engages both the wheels and brush. When properly adjusted the wheels and brush engage at the same time.

