




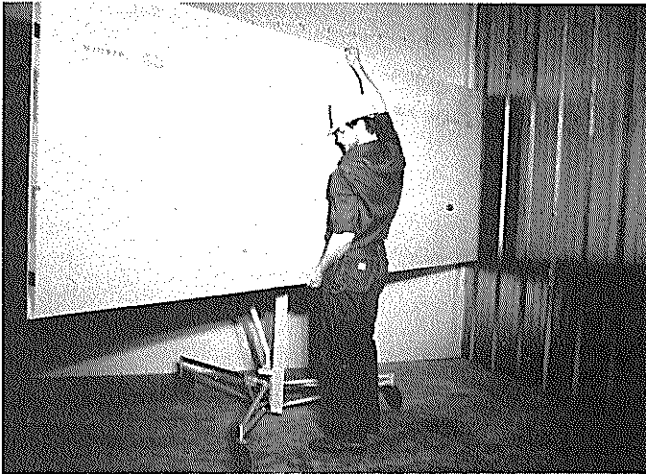




**1. To Load:** Set the backstop on the tripod base to hold the unit in position. Extend the cradle outriggers to properly support the drywall, tilt the cradle, and swing out the cross arm support hooks. Load the PANELLIFT® Drywall Lift from the front as shown with the face paper of the drywall contacting the cradle.

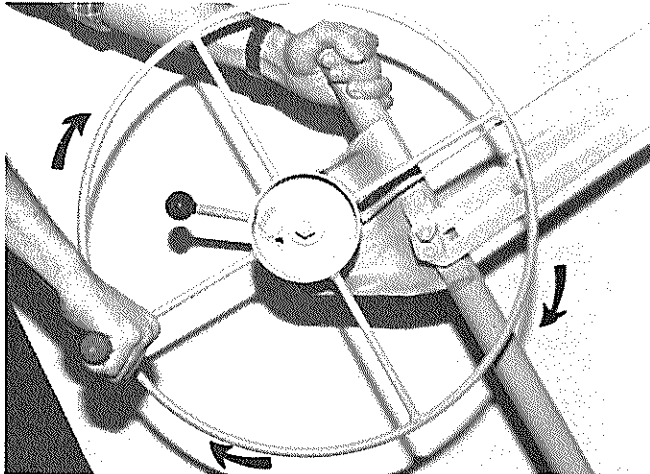

**2. To raise the PANELLIFT® Drywall Lift** rotate the winch wheel in the direction shown. The brake arm is spring loaded to hold the winch automatically at any height.

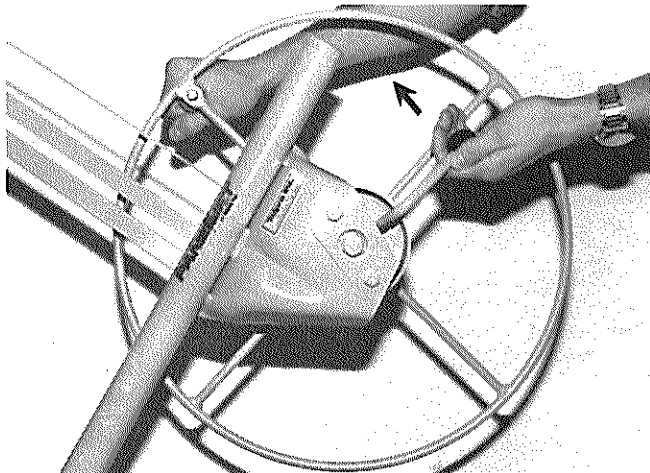

**3. To lower the PANELLIFT® Drywall Lift** control the backward rotation of the winch by grasping the winch handle with your right hand **BEFORE** releasing the brake with your left hand. **ALWAYS** use this two hand method when lowering the PANELLIFT® Drywall Lift.

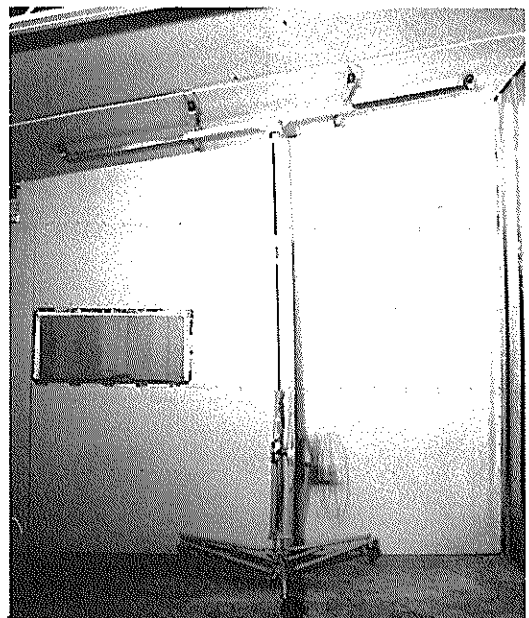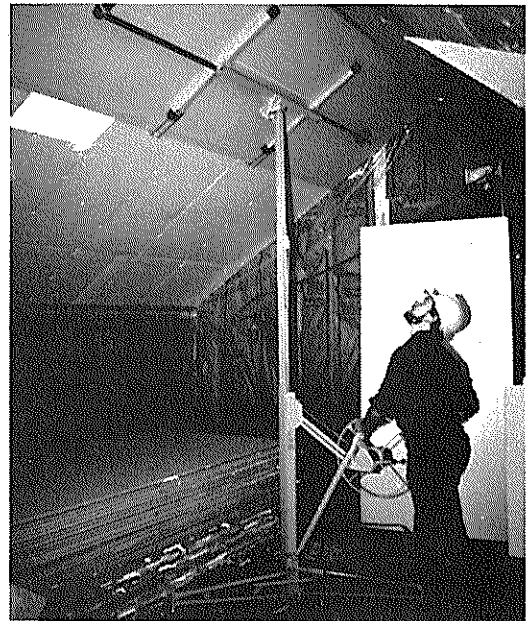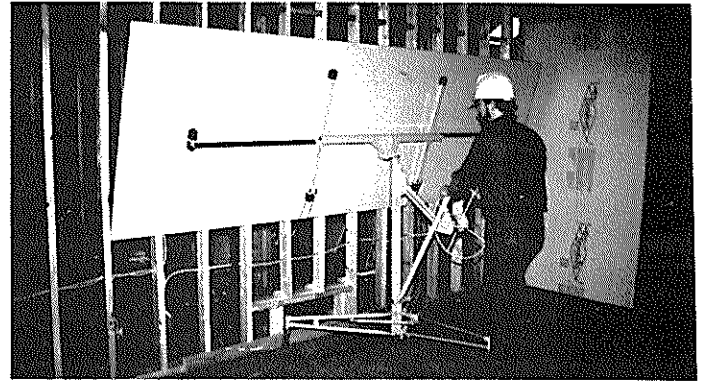

**4. The PANELLIFT® Drywall Lift** will hold drywall in position on sidewalls and sloped ceilings in addition to level ceilings. The cradle also tilts up to 10° longitudinally. **USE THE BACKSTOP ON THE TRIPOD BASE WHEN WORKING ON SIDEWALLS AND SLOPED CEILINGS.**