 


WARNING: READ THOROUGHLY BEFORE USING


SAFETY INSTRUCTIONS for POLE PRUNING SAWS, and LOPPERS, and POLES

- When attaching pruner head to poles or extensions, be sure the head is tight and securely fastened to the pole.
- **NEVER PLACE FINGERS OR HANDS IN THE AREA OF THE SAW BLADE AND/OR LOPPER BLADE. SEVERE PERSONAL INJURY COULD RESULT. "PULLING THE ROPE EXTENDS THE PULL-SHEAR INTO THE U-SHAPED AREA. THIS PULL-SHEAR MECHANISM IS SHARP ENOUGH FOR THE CUTTING OF SMALL LIMBS. THEREFORE, NEVER PLACE HANDS OR FINGERS IN THIS AREA. DOING SO COULD RESULT IN SERIOUS PERSONAL INJURY TO HANDS AND/OR FINGERS."**
- Always wear goggles or face shield when cutting over head—this will help prevent falling particles from getting into the eyes.
- Make sure children, pets and onlookers are safely clear of falling debris.
- Always cut while standing firmly on the ground. **NEVER CUT FROM ROOF TOPS, LADDERS OR TREES.**
- **NEVER USE A PRUNER NEAR ELECTRIC POWER LINES. CONTACT WITH SUCH A LINE COULD CAUSE SEVERE ELECTRIC SHOCK, PERSONAL INJURY, DEATH AND/OR PROPERTY DAMAGE.**
- Always watch the pruning area when actually cutting, and do not stand directly under limb being cut otherwise the limb may fall upon you causing personal injury.
- When using poles which are made up of more than one piece, such as "telescoping" poles, "add-on" type extension poles, or a combination of these, it is absolutely necessary that the locking together means of the poles are securely tightened before each use. Failure to tighten securely could result in the poles working loose from each other and/or from the pruner head.
- For safety reasons, poles and pruners should be checked periodically during use to be sure that all locking means are securely tight. If locking means are not securely tight, the poles and pruners may come apart, and fall causing personal injury to you or others or property damage.
- Do not attempt to use the pruner-lopper as a chopping type tool (such as an ax). Doing so results in loss of control of the pole pruner, and can cause you to lose your balance. Serious personal injury or property damage may result. If you have a saw blade, be sure to keep saw blade wing nut tight at all times. Check periodically.

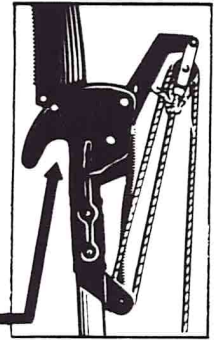


For telescoping adjustable poles


Be sure to keep locking clamp and hex nut tight at all times. Check them periodically.

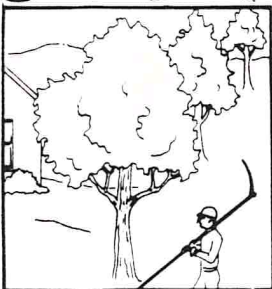

For safety reasons, poles and pruners should be checked periodically during use to be sure that all locking means are securely tight. If locking means are not securely tight, the poles and pruners may come apart, and fall causing personal injury to you or others or property damage.

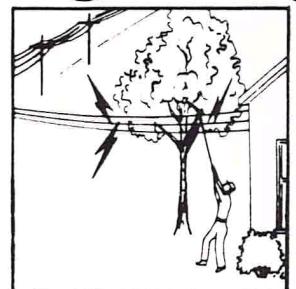

WARNING:
NEVER USE A PRUNER NEAR ELECTRIC POWER LINES. CONTACT WITH A POWER LINE COULD CAUSE SEVERE ELECTRIC SHOCK, PERSONAL INJURY, EVEN DEATH AND/OR PROPERTY DAMAGE

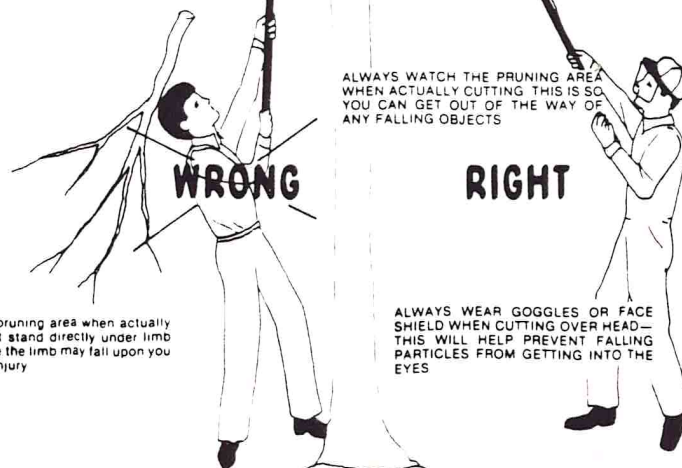


ALWAYS WATCH THE PRUNING AREA WHEN ACTUALLY CUTTING THIS IS SO YOU CAN GET OUT OF THE WAY OF ANY FALLING OBJECTS

WRONG

RIGHT

Always watch the pruning area when actually cutting, and do not stand directly under limb being cut otherwise the limb may fall upon you causing personal injury

ALWAYS WEAR GOGGLES OR FACE SHIELD WHEN CUTTING OVER HEAD—THIS WILL HELP PREVENT FALLING PARTICLES FROM GETTING INTO THE EYES

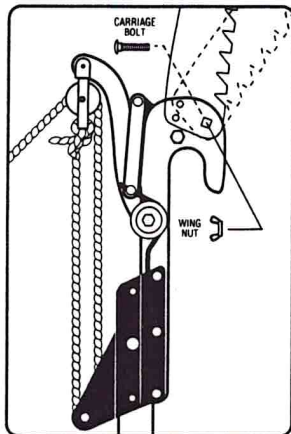

Saw Blade Assembly

- Put carriage bolt through square hole in pruner head (as shown).
- Place saw blade on pruner head with the large hole over the bolt and either of the smaller holes over the pin in the pruner head (depending on the cutting angle desired).
- Attach washer-faced wing nut to bolt and tighten securely.

Maintenance Tips

- Keep blades, hooks, and anvils clean of sap and other debris by using degreaser or solvent.
- Oil pivot points for smooth and efficient operation.
- Tighten any loose screws, nails, nuts or bolts as needed.

Basic Tree Pruner Rules of Use!

1. Do not cut near electrical wires! Call a professional!
2. Do not stand on a ladder when cutting!
3. Wear safety shield or glasses to protect eyes!
4. Do not stand directly under branch you are cutting.
5. Store in safe place out of reach of children. (Loosen wing nut, put saw blade down along pole and tighten wing nut for storage.)
6. Keep fingers away from blades.

For Your Safety




WALLACE

A Fiskars Company

Pruning For Healthier Plants And Trees


Encourage flower and fruit production.

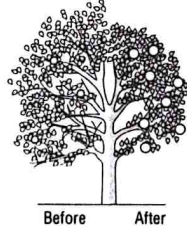


Thin dense growth.



Repair storm damage.

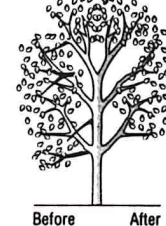


Control Direction Of Growth

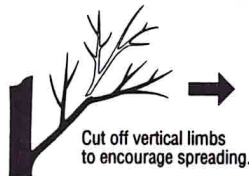


Proper Pruning Cut

Begin opposite the base of the bud slanting upward to the top, 1/4 inch beyond the bud.

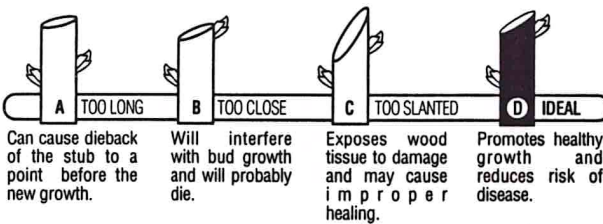

Removing Large Limbs

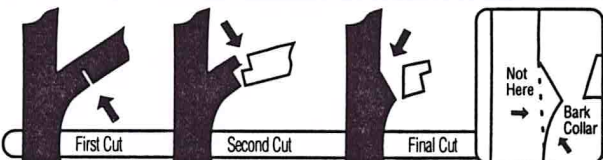

First make a cut from underneath, about halfway through the limb.

Cut off the limb several inches beyond the first undercut.

Cut the remaining limb at an angle so that the bark collar remains intact.