

HOW TO USE STEELBANDING

REQUIRED TOOLS & SEALS

SEALS



TENSIONER



SEALER




Open, Snap
On Type

Pulls Banding
Tight

Bends Seals
To Banding


STEP #3

Place seal in position. Open sealer handles fully and center jaws on the seal.

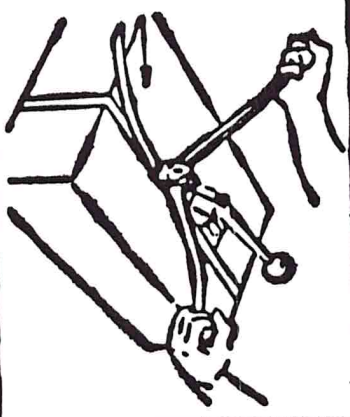


STEP #1

Loop banding around container as illustrated. Press stretcher handle down and insert both straps under lead wheel.

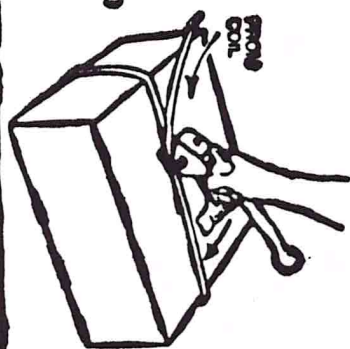


STEP #4

Close sealer handles completely to properly bend and close the seal around the banding. Open handles to remove sealer.

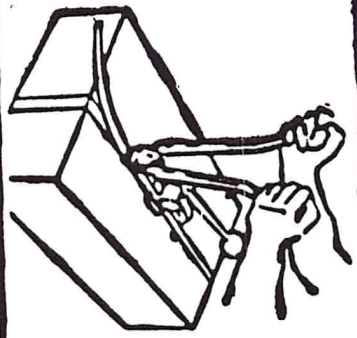

STEP #2

Move handle back & forth until strap is tight. CAUTION: Do not press stretcher handle down all the way, as this will release tension.

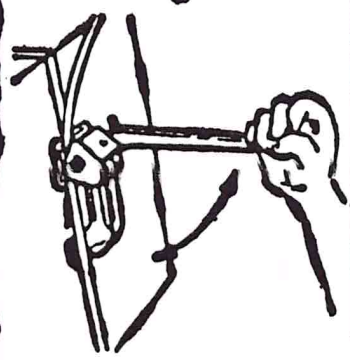

STEP #5

Release tensioner pawl with thumb; press stretcher handle all the way down. To break banding, bend back and forth at seal.

