



Fitting the Battery

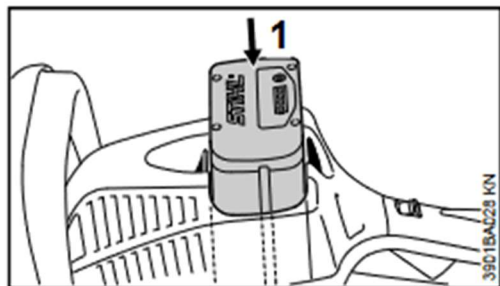

- Insert the battery (1) in the power tool – the battery slides into the compartment – press it down carefully until it snaps into position – the battery must be flush with the top of the housing.

Switching on the Machine

- Make sure you have a secure and firm footing.
- Stand upright – hold the power tool in a relaxed position.
- Make sure the cutting attachment is not touching the ground or any other objects.
- Hold the power tool with both hands – one hand on the control handle – one hand on the loop handle.

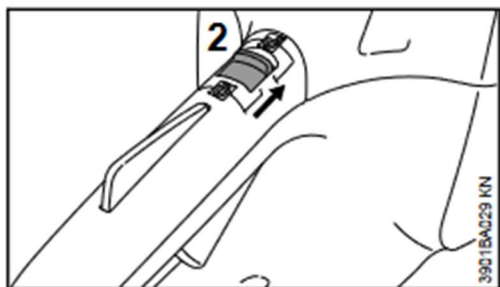

- Unlock the power tool by moving the retaining latch (2) to .




- Make sure the cutting attachment is not touching the ground or any other objects.
- Hold the power tool with both hands – one hand on the control handle – one hand on the loop handle.

Trigger

Motor speed can be controlled with the trigger switch. Depress the trigger switch to accelerate the motor.

Remove the battery.

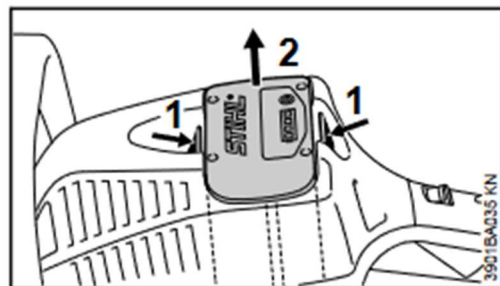


- Press in both locking tabs (1) at the same time to unlock the battery.
- Take the battery (2) out of the housing.

When the machine is not in use, store it in such a way that it does not endanger others.

Secure it against unauthorized use.

Light Emitting Diodes (LED) on Charger

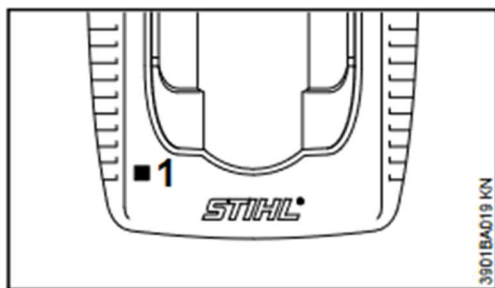

The LED (1) on the charger may glow continuously green or flash red.

Green continuous light ...

... indicates the following:

The battery

- is being charged
- is too hot and must cool down before charging

See also "LEDs on battery".

The green LED on the charger goes off as soon as the battery is fully charged.


Red flashing light ...

... may indicate the following:

- No electrical contact between battery and charger – remove and refit the battery
- Malfunction in battery – see also "LEDs on Battery".
- Malfunction in charger – have checked by a servicing dealer. STIHL recommends an authorized STIHL servicing dealer.


Light Emitting Diodes (LED) on Battery

Four LEDs show the battery's state of charge and any problems that occur on the battery or power tool.

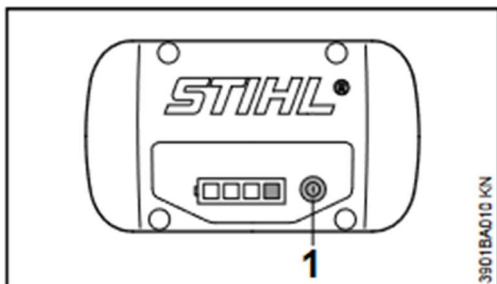

- Press button (1) to activate the display – the display goes off automatically after 5 seconds.

If the red LEDs glow continuously / flash

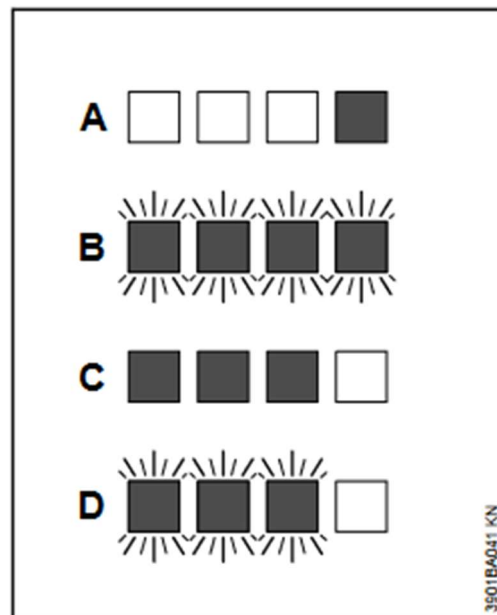

A	1 LED glows continuously red:	Battery is too hot ¹⁾ 2)/cold ¹⁾
B	4 LEDs flash red	Malfunction in battery ³⁾
C	3 LEDs glow continuously red:	Power tool is too hot – allow it to cool down.
D	3 LEDs flash red	Malfunction in power tool ⁴⁾