

MAINTENANCE:

40-660

1. Every heater should be inspected before each use.
2. Heaters must be inspected at least annually by a qualified service person.
3. The hose assembly shall be visually inspected prior to each use of the heater. If it is evident there is excessive abrasion or wear, or the hose is cut, it must be replaced prior to the heater being put into operation. The replacement hose assembly shall be that specified by the manufacturer.
4. The appliance must be kept clear and free from combustible materials, gasoline and other flammable vapors and liquids.
5. The flow of combustion and ventilation air must not be obstructed. Be sure to check the fan assembly and ensure the motor and blade are operating properly.
6. Compressed air may be used to keep components free of dust and dirt build up.
Note: Do not use the compressed air inside any piping or regulator components.

START UP INSTRUCTIONS:

1. Connect the POL inlet on the regulator of the heater to the propane cylinder.
2. Open the cylinder valve.
3. Leak test the cylinder connection.
4. Depress the fan switch to the "ON" position. The fan motor will start and air will be pushed through the outlet of the heater.
5. Depress the heat switch to the "ON" position. The burner should ignite and hot air will be pushed through the outlet of the heater.
6. Set the Thermostat (if provided) to desired temperature.
7. If heater fails to ignite after 3 attempts call your supplier for service.

TO SHUT DOWN:

1. Close the cylinder valve on the propane cylinder.
2. Move both the "FAN" and "BURNER" switches to the "OFF" position.
3. Disconnect heater from the cylinder.