

BIG RED POST PULLER

TYSON'S INC.

405-634-6284

1

Put the post puller up against the post to be removed. Make sure the base is sitting level to the ground (block if necessary). Lift the reversing latch to the upright position.

2

Make sure there are no obstacles to prevent clean lift of post. Wrap the chain around the post two or more times allowing it to slide down to a snug fit then pull straight up.

3

While holding the top handle to assist in guiding the post straight up, begin jacking until the post has become loose. Tilt the post back and roll away.

WARNING:

The jack must be loaded with no less than a minimum of 110 lbs to lower step by step, otherwise the lifting nose will drop. Keep in mind jacking up at an angle can bend the I-Beam and ultimately damage your Post Puller...

bigredpostpuller.com