

GROUND HAUG

LIGHTING INSTRUCTIONS

While holding lighter with flame through round hole on opposite side of heater where thermocouple is located and against ceramic face of burner, depress blue button on safety control. After burner lights, hold button down for 30 to 45 seconds, if burner does not stay lit, attempt again.

NOTE:

Do not light heater at venturi tube were gas comes in.

Bank Ground thawing heater around bottom with snow, dirt or fire resistant blanket to prevent wind from interfering with thawing time.

Strap tank to handles on ground thawing unit so tanks will not tip over. Make sure hose doesn't sit on top of vent on cover.