



Upper cabinets can be installed in 3 easy steps.

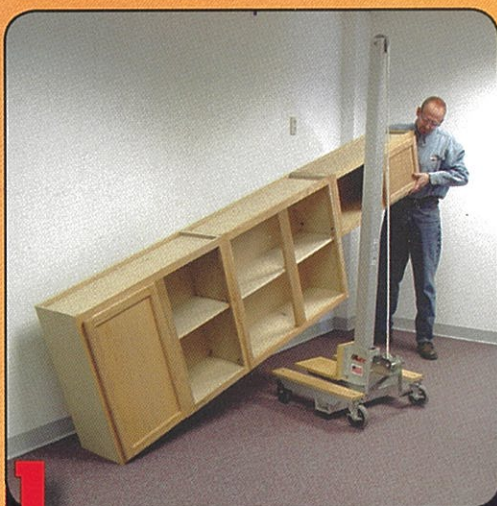

1

Load upper by lifting one end and rolling lift under.

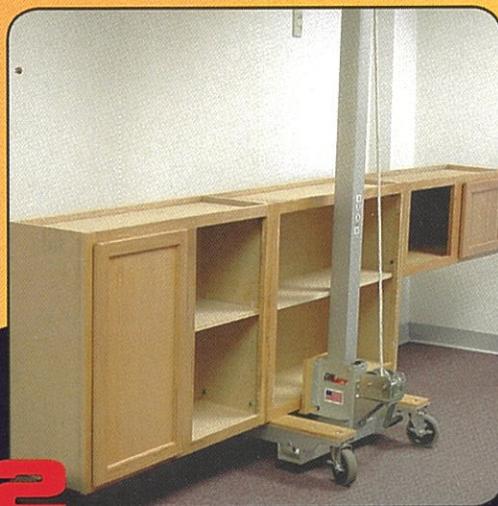

2

Balance cabinet on lift and position in front of wall.



3


Raise cabinet to desired height and mount on the wall.

Hanging upper cabinets over existing counter tops is easy as ABC!



A

Position loaded upper in front of base.

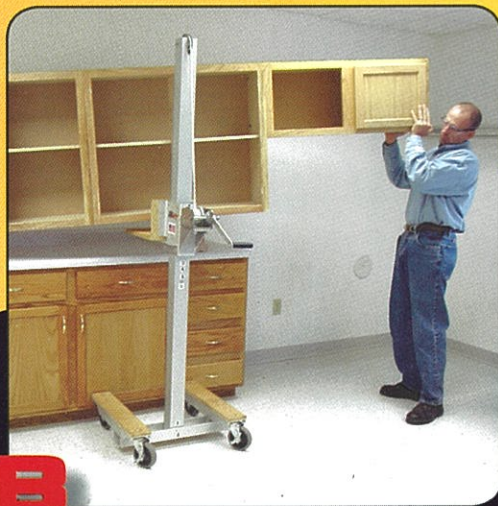

B

Carefully transfer upper cabinet to T spacers placed on base unit. (T spacers not included)



C

Raise cabinet to desired position and mount to wall.